


NAVARRO COUNTY ELECTRIC COOPERATIVE, INC.

P.O. Box 616 - 3800 W. Hwy. 22 - Corsicana, TX 75151 - Tele: 903-874-7411 - Fax: 903-874-8422

POLE MOUNTED TEMPORARY METER LOOP FOR OVERHEAD SERVICE

METER POLE FOR CONSTRUCTION PURPOSES ONLY, FOR 120 DAYS OR LESS

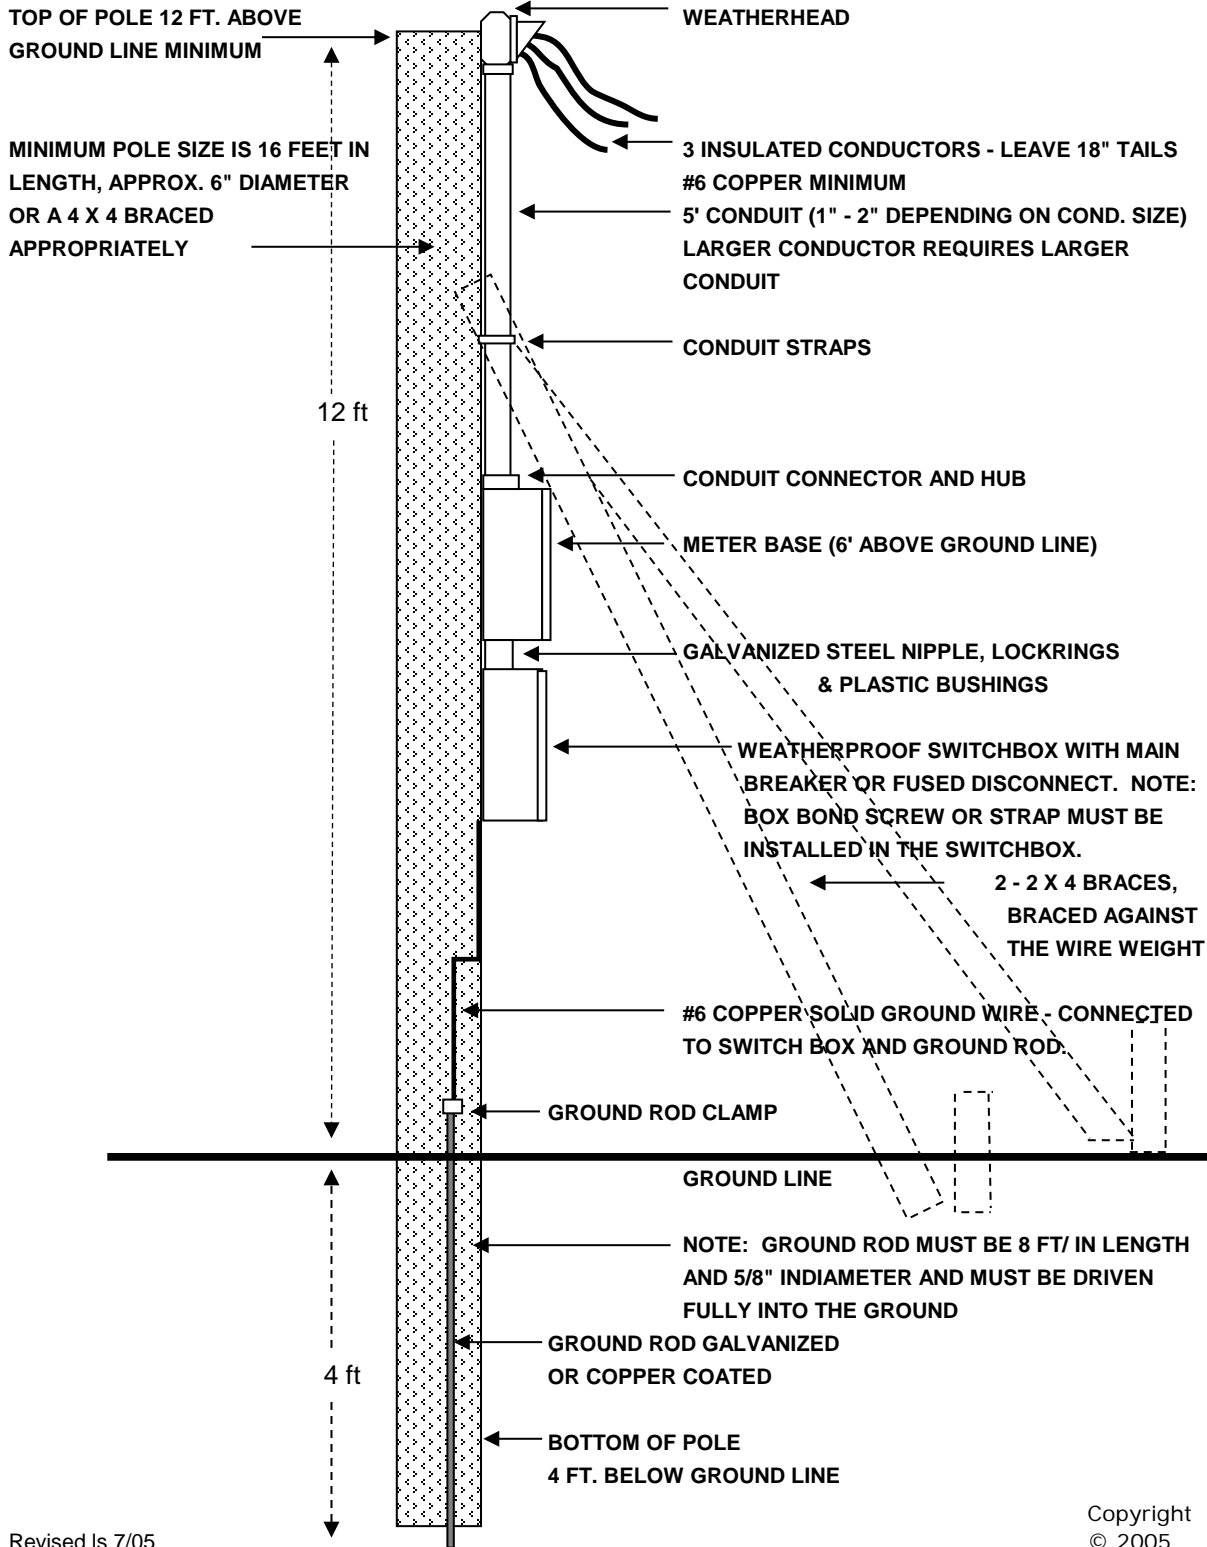

Revised Is 7/05

Copyright
© 2005

NAVARRO COUNTY ELECTRIC COOPERATIVE, INC.

P.O. Box 616 - 3800 W. Hwy. 22 - Corsicana, TX 75151 - Tele: 903-874-7411 - Fax: 903-874-8422

MINIMUM SPECIFICATIONS FOR TEMPORARY POLE MOUNTED OVERHEAD METER LOOPS

1. A round preservative treated pole or a 4 x 4 - 16 ft. in length installed no closer than 30 ft. from a Co-op pole. Pole should be 6 inch in diameter.
2. Pole to be set 4 feet deep in ground and have 12 feet clearance at the top of pole.
3. All disconnects, boxes, plugs, etc. must be weatherproof type.
4. Breakers and fuses will be the correct size according to the size conductor used, per National Electric Code.
5. Conduit may be rigid galvanized or EMT with weatherproof fittings. No plastic conduit will be allowed above the breaker box or main disconnect.
6. Leave approx. 18 inches of wire out of the weatherhead for the Co-op to make connections.
7. Meter base must be mounted 6 feet above ground level.
8. Ground rod must be copper or galvanized coated, at least 8 feet in length and connected with an approved clamp to a minimum of #6 bare copper ground wire.
9. One permanent service meter base will be furnished by the Co-op and may be picked up by the customer during regular office hours, M - F, 8:00 AM to 5:00 PM.
10. All wiring on the meter pole is the responsibility of the customer, both from the standpoint of the installation and maintenance.
11. Co-op personnel are not allowed to work on the customer's meter pole or wiring. Any unsafe wiring found will not be connected until it has been corrected by the customer.
12. See drawing on the front of this sheet for an example of a typical meter pole.